




CSIS-202A1 Supervised Signal Isolator Module Installation Instructions

The CSIS-202A1 is a signal isolator which provides two supervised isolator outputs. These isolators remove the bells, horns or strobes which follow it out of the circuit should there be a trouble (short). This feature provides integrity of the signal circuit, that is; should an isolated bell, horn or strobe malfunction, the rest of the bells, horns or strobes will continue to function.

INSTALLATION

The signal isolators mount into a standard 4 inch square electrical box using the 2 screws provided. These electrical boxes are usually mounted in hallways, outside the suites which contain the signalling devices to be isolated. There is a white front plate included with the isolator which is mounted onto the isolator as shown in Figure 1.

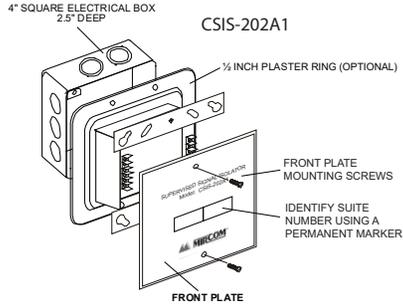

Electrical Ratings

Signal In: Regulated 24 FWR/24 VDC
Suite Current: 400 mA MAX per suite
Standby Current: 0.0A
Alarm Current: 0.1A
Max. Trip Current: 900mA

To locate faulted suite device

1. Set all other signal circuits to bypass except the circuit under test.
2. If Class A circuit, disconnect the return wire at the panel.
3. Sound signals.
4. Walk the floor to locate area where the sound ceases, this is the location of the fault.

Figure 1: Module Installation Instruction

Notes

1. All unused screw terminals must be tightened to prevent shorting to front plate.
2. For proper system operation refer to detailed installation instructions provided with control panel and local installation standards.
3. Wiring supervised by the Fire Alarm Control Panel as per Code.
4. Refer to signal device instruction for wiring gauge information.
5. Subtract 0.1A from the total signal circuit current when using any number of these isolators i.e. 1.7A subtract 0.1A equals 1.6A available for signalling when using isolators.

LT-879 Rev 6




CSIS-202A1 Supervised Signal Isolator Module Installation Instructions

The CSIS-202A1 is a signal isolator which provides two supervised isolator outputs. These isolators remove the bells, horns or strobes which follow it out of the circuit should there be a trouble (short). This feature provides integrity of the signal circuit, that is; should an isolated bell, horn or strobe malfunction, the rest of the bells, horns or strobes will continue to function.

INSTALLATION

The signal isolators mount into a standard 4 inch square electrical box using the 2 screws provided. These electrical boxes are usually mounted in hallways, outside the suites which contain the signalling devices to be isolated. There is a white front plate included with the isolator which is mounted onto the isolator as shown in Figure 1.

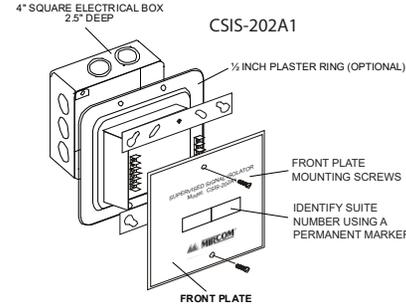

Electrical Ratings

Signal In: Regulated 24 FWR/24 VDC
Suite Current: 400 mA MAX per suite
Standby Current: 0.0A
Alarm Current: 0.1A
Max. Trip Current: 900mA

To locate faulted suite device

1. Set all other signal circuits to bypass except the circuit under test.
2. If Class A circuit, disconnect the return wire at the panel.
3. Sound signals.
4. Walk the floor to locate area where the sound ceases, this is the location of the fault.

Figure 1: Module Installation Instruction

Notes

1. All unused screw terminals must be tightened to prevent shorting to front plate.
2. For proper system operation refer to detailed installation instructions provided with control panel and local installation standards.
3. Wiring supervised by the Fire Alarm Control Panel as per Code.
4. Refer to signal device instruction for wiring gauge information.
5. Subtract 0.1A from the total signal circuit current when using any number of these isolators i.e. 1.7A subtract 0.1A equals 1.6A available for signalling when using isolators.

LT-879 Rev 6




CSIS-202A1 Supervised Signal Isolator Module Installation Instructions

The CSIS-202A1 is a signal isolator which provides two supervised isolator outputs. These isolators remove the bells, horns or strobes which follow it out of the circuit should there be a trouble (short). This feature provides integrity of the signal circuit, that is; should an isolated bell, horn or strobe malfunction, the rest of the bells, horns or strobes will continue to function.

INSTALLATION

The signal isolators mount into a standard 4 inch square electrical box using the 2 screws provided. These electrical boxes are usually mounted in hallways, outside the suites which contain the signalling devices to be isolated. There is a white front plate included with the isolator which is mounted onto the isolator as shown in Figure 1.

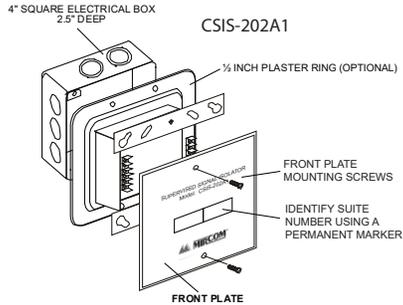

Electrical Ratings

Signal In: Regulated 24 FWR/24 VDC
Suite Current: 400 mA MAX per suite
Standby Current: 0.0A
Alarm Current: 0.1A
Max. Trip Current: 900mA

To locate faulted suite device

1. Set all other signal circuits to bypass except the circuit under test.
2. If Class A circuit, disconnect the return wire at the panel.
3. Sound signals.
4. Walk the floor to locate area where the sound ceases, this is the location of the fault.

Figure 1: Module Installation Instruction

Notes

1. All unused screw terminals must be tightened to prevent shorting to front plate.
2. For proper system operation refer to detailed installation instructions provided with control panel and local installation standards.
3. Wiring supervised by the Fire Alarm Control Panel as per Code.
4. Refer to signal device instruction for wiring gauge information.
5. Subtract 0.1A from the total signal circuit current when using any number of these isolators i.e. 1.7A subtract 0.1A equals 1.6A available for signalling when using isolators.

LT-879 Rev 6




CSIS-202A1 Supervised Signal Isolator Module Installation Instructions

The CSIS-202A1 is a signal isolator which provides two supervised isolator outputs. These isolators remove the bells, horns or strobes which follow it out of the circuit should there be a trouble (short). This feature provides integrity of the signal circuit, that is; should an isolated bell, horn or strobe malfunction, the rest of the bells, horns or strobes will continue to function.

INSTALLATION

The signal isolators mount into a standard 4 inch square electrical box using the 2 screws provided. These electrical boxes are usually mounted in hallways, outside the suites which contain the signalling devices to be isolated. There is a white front plate included with the isolator which is mounted onto the isolator as shown in Figure 1.

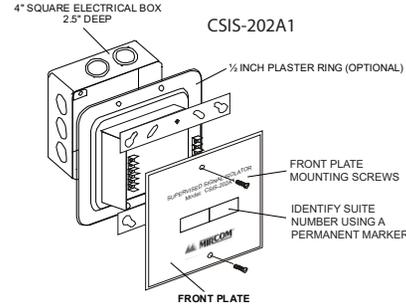

Electrical Ratings

Signal In: Regulated 24 FWR/24 VDC
Suite Current: 400 mA MAX per suite
Standby Current: 0.0A
Alarm Current: 0.1A
Max. Trip Current: 900mA

To locate faulted suite device


1. Set all other signal circuits to bypass except the circuit under test.
2. If Class A circuit, disconnect the return wire at the panel.
3. Sound signals.
4. Walk the floor to locate area where the sound ceases, this is the location of the fault.

Figure 1: Module Installation Instruction

Notes

1. All unused screw terminals must be tightened to prevent shorting to front plate.
2. For proper system operation refer to detailed installation instructions provided with control panel and local installation standards.
3. Wiring supervised by the Fire Alarm Control Panel as per Code.
4. Refer to signal device instruction for wiring gauge information.
5. Subtract 0.1A from the total signal circuit current when using any number of these isolators i.e. 1.7A subtract 0.1A equals 1.6A available for signalling when using isolators.

LT-879 Rev 6

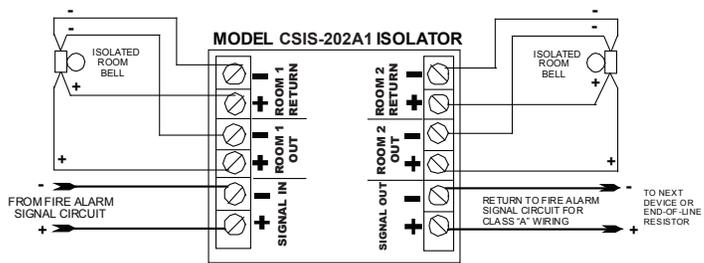

BELLS ARE SHOWN IN THE DRAWINGS, BUT THEY REPRESENT HORNS AND STROBES AS WELL.

Figure 2: CSIS-202A1 Isolator wiring with room bells, horns or strobes


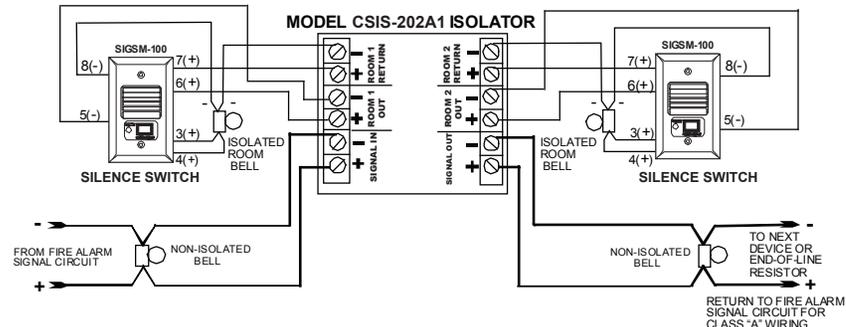


Figure 3: CSIS-202A1 Isolator wiring with SIGSM-100

LT-879 Rev 6

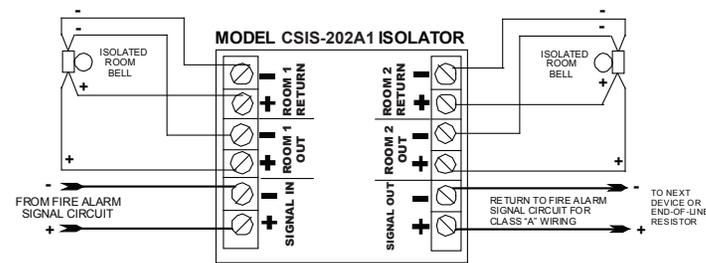

BELLS ARE SHOWN IN THE DRAWINGS, BUT THEY REPRESENT HORNS AND STROBES AS WELL.

Figure 2: CSIS-202A1 Isolator wiring with room bells, horns or strobes


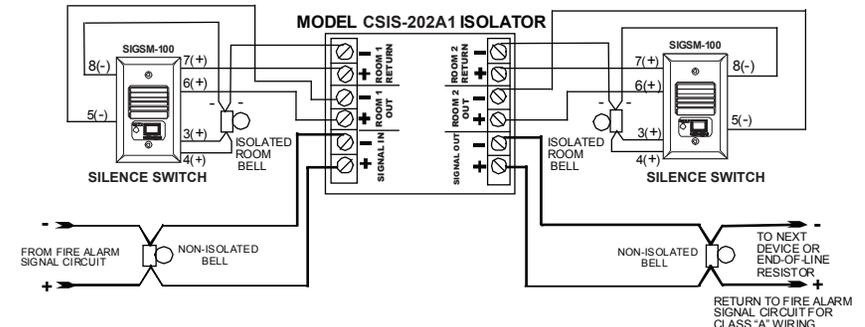


Figure 3: CSIS-202A1 Isolator wiring with SIGSM-100

LT-879 Rev 6

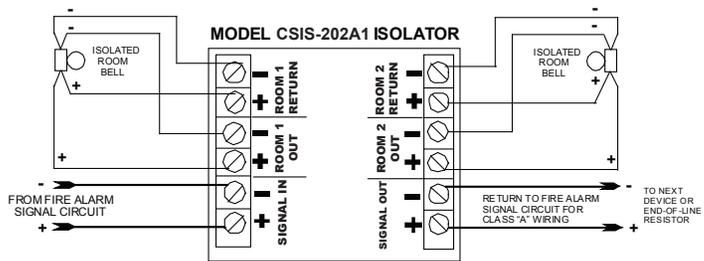

BELLS ARE SHOWN IN THE DRAWINGS, BUT THEY REPRESENT HORNS AND STROBES AS WELL.

Figure 2: CSIS-202A1 Isolator wiring with room bells, horns or strobes


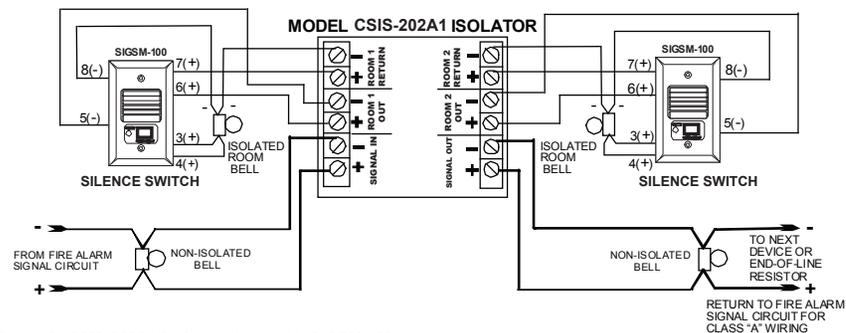


Figure 3: CSIS-202A1 Isolator wiring with SIGSM-100

LT-879 Rev 6

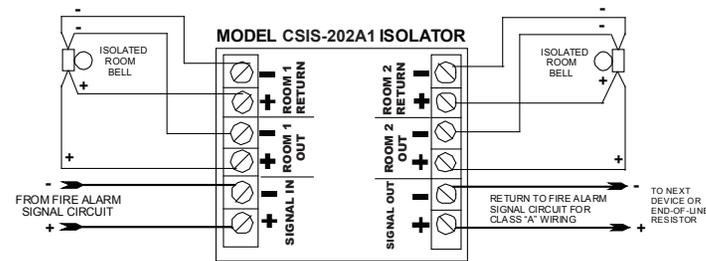

BELLS ARE SHOWN IN THE DRAWINGS, BUT THEY REPRESENT HORNS AND STROBES AS WELL.

Figure 2: CSIS-202A1 Isolator wiring with room bells, horns or strobes

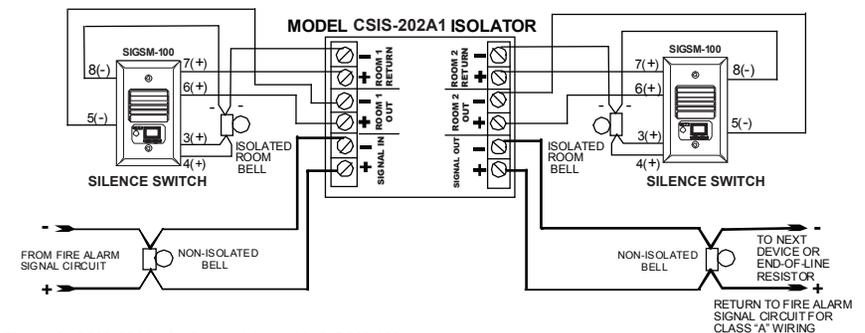


Figure 3: CSIS-202A1 Isolator wiring with SIGSM-100

LT-879 Rev 6